

# Quick Start Installation of Hybrid™ for the EPSON® Stylus Pro 4880




**IMPORTANT:** Do not install the Epson Inks provided with the printer. Please call Sawgrass Technical Support if you need assistance installing the SubliJet IQ and ChromaBlast inks.

## INSTALLING SUBLIJET IQ AND CHROMABLAST CARTRIDGES:


If you are replacing existing cartridges because they are empty or low, please see the following instructions. If not, go directly to step #1.

When a cartridge is empty or low, INK LOW or REPLACE INK CART will display on the LCD panel. Raise, then lower the ink levers on either side of the printer. The ink indicator on the LCD panel will flash, indicating which cartridge is low or empty. Be sure you have the correct color cartridge for replacement.



**NOTE:** The LCD Panel will indicate the ink colors of the original OEM ink configuration and not the Hybrid ink configuration.

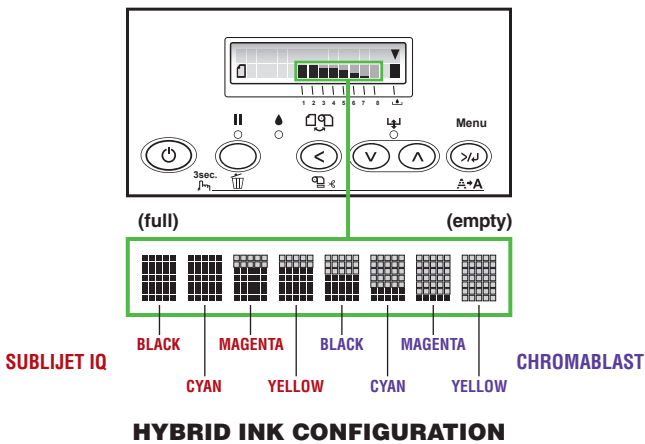

**1.** Ensure the printer power is on. Press the ink compartment cover to release the latch and open the cover.

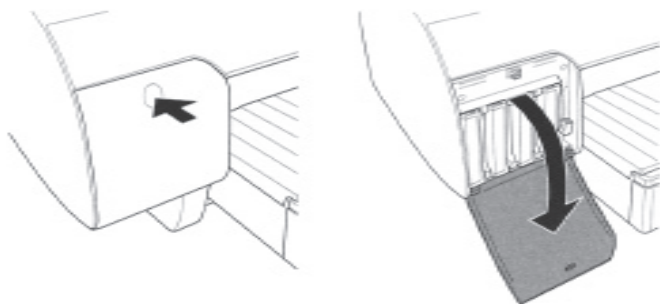

**2.** Raise both ink levers. These are located on the right side of each ink cartridge compartment.

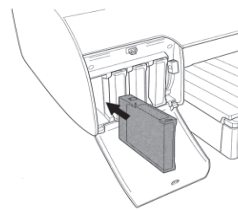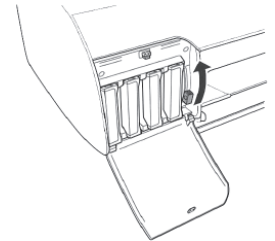


**3.** Install the ink cartridges into the color-coded slots in the following order starting from left to right:


**Black(SJ), Cyan(SJ), Magenta(SJ), Yellow(SJ), Black(CB), Cyan(CB), Magenta(CB) and Yellow(CB)**

**Note:** The cartridge label should be facing left as the cartridge is inserted into its slot.


**4.** After all eight cartridges are installed, lower the ink levers. The printer will begin charging the ink-delivery system and the pause light will flash.

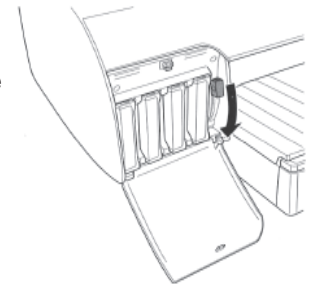


**5.** After approximately 1 minute, ink lever messages will appear on the LCD panel. The LCD will indicate that the printer recognized "NON-GENUINE" ink cartridges.

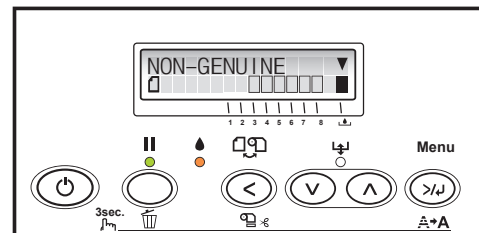


**6.** Press the down key (V) until a message appears that asks the user whether the ink cartridges are “NON-GENUINE”.

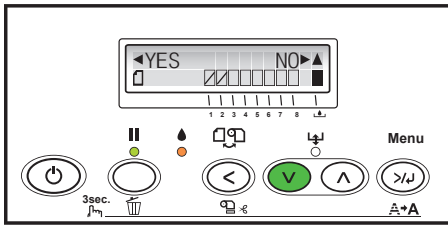


**7.** Press the left key (<) to acknowledge that the cartridges are “NON-GENUINE”.

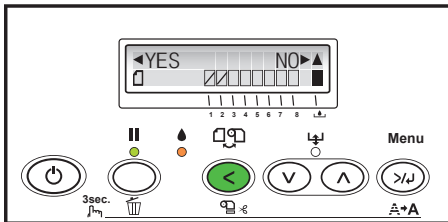


**8.** Press the left key (<) until the following message appears:

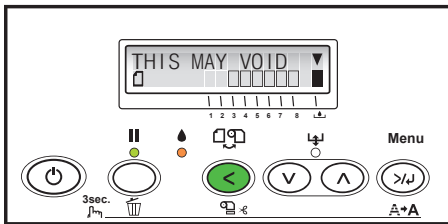



**9.** Press the down key (V) until the following message appears:

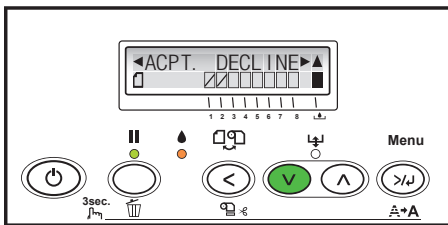


**10.** Press the left key (<) to accept acknowledgement of the warranty message.

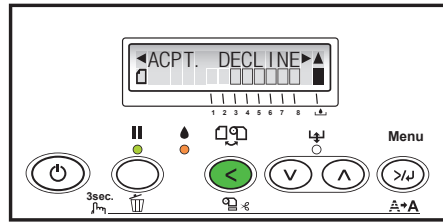



**11.** The following messages will appear:

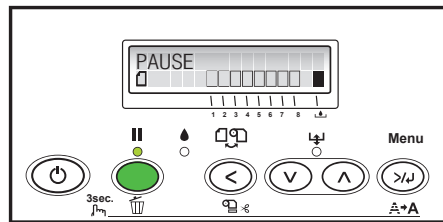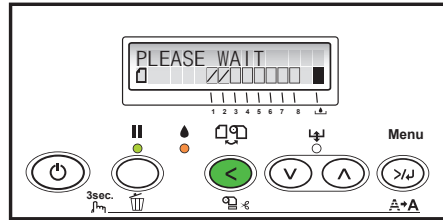

**12.** Press the PAUSE key once.

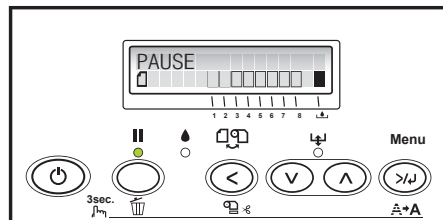

**13.** The following message will appear. The printer is now ready for use.

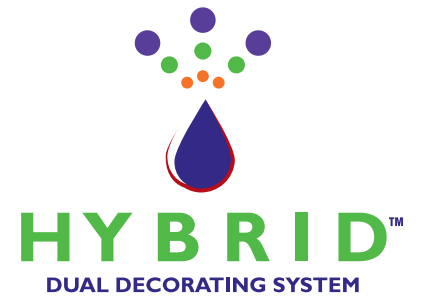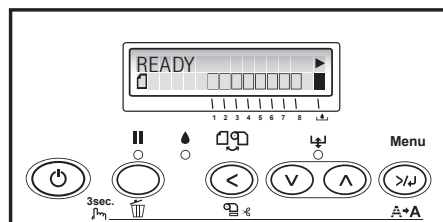

Exclusive Two-in-One Cotton/Sublimation System! The Sawgrass Hybrid System offers the ultimate in flexibility and production in digital printing. Featuring Sawgrass' patented SubliJet IQ® and ChromaBlast™ inks, the Hybrid system allows for printing on both polyester and cotton surfaces. The possibilities from one machine are truly endless! This all-in-one system produces vivid images that your customers will love and profits that you will appreciate.



EPSON is a registered trademark of Epson Seiko Corporation. Hybrid and ChromaBlast are trademarks and SubliJet IQ is a registered trademark of Sawgrass Technologies, Inc.