


# INSTRUCTIONS FOR SUBLIMATABLE ONZIES AND INFANT

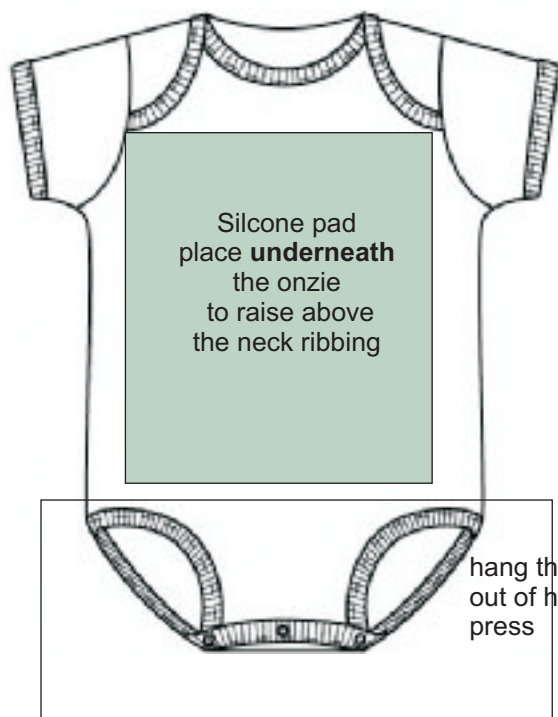

Make sure the snaps hang out the end of the heat press. Also because of the neck and overlap, The body of the garment is slightly recessed so I would recommend raising up the body with a silicone pad or a stack of bond paper from under neath. Once this is done the position the transfer, tape down with heat tape and sublimate at 400 degrees for aprox. 55 seconds.



1-800-886-3331      [www.sepsgraphics.com](http://www.sepsgraphics.com)  
[sales@sepsgraphics.com](mailto:sales@sepsgraphics.com)